

4 PAIRING TWO PHONES Pair VoxTube by Voice Guide
Wear your VoxTube 500 and press the TALK button as
the picture shown as below. Press & Hold the TALK
button for 7 seconds - about 3 seconds interval,
it will announce "Power On" and carry on another 4
seconds interval, it will announce "Pairing" ....".

Mobile phone's Bluetooth settings:

- ADD or SEARCH FOR DEVICES when "MIPOW\_Vox500" appears, select it or enter passcode "0000" if asked.

- There is prompt tone when paired.

5 ADJUCT VOLUME

M-

HANG UP A CALL Tap TALK Button o

djust the VoxTube 500 Speaker Volume
Press (a) to decrease the VoxTube 500 speaker's volume Press <del>()</del> to increase the VoxTube 500 speaker's volume

Battery capacity on iPhone shows up automatically after it is connected.

**1**<sup>st</sup>

Auto Re-connect
If YoxTube 500 is already paired with your phone before, it will automatically re-connect your phone when you pres
TALK button for 3 seconds to power on your VoxTube 500.

Pair VoxTube 500 with your SECOND Phone
Pairing two phones for the first time

• When VoxTube needs to pair with a second device, it needs to be restarted and reactivate the pairing mode.

• Go to your phone's Bluetooth settings, ADD or SEARCH FOR DEVICES when "MIPOW\_Vox500" appears, select it or enter passcode "0000" if asked.

• There is prompt tone when paired.

Talk Button


I . — Bluetooth headset battery capacity shows on screen 0 Battery capacity on iPhone shows up automatically after it is connected. 6 TALKING d **TALK** Button for 3 seconds, voice pr is heard, headset is in standby mode POWER OFF
Press & Hold TALK Button for 4 seconds, voice prompt
"Power Off" is heard. ANSWER A CALL
Tap TALK Button, continuous tone is heard.

once while on call, beep tone is heard.

REJECT A CALL
Double-Tap TALK Button to reject a call, beep.
tone is heard.

CANCEL A CALL
Tap TALK Button to cancel a call when dial out a numbe beep tone is heard.

REDIAL LAST NUMBER CALLED
Double-Tap TALK Button to redial last number called when you hear music or in standby mode.

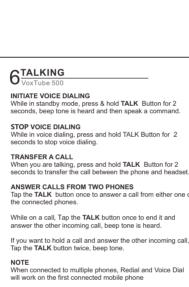

7 OTHER FUNCTIONS

Play / Pause Tap the TALK b

prompt tone

Play music

VoxTube 500 is capable of streaming over Bluetooth either from a mobile phone or any other Bluetooth device supporting A2DP. Once you have paired your VoxTube 500 with your mobile phone or with a Bluetooth music player, use your phone or music player to play and pause. When you receive call, the music will automatically be suspended and you will be able to answer or reject a call through the VoxTube 500. Once you end a call, the music should recommence.

Charge to rese
If you charge VoxTube 500 without turning it off, it is still connected to your mobile devices.

Exit paring mode
Under the paring mode VoxTube 500 will deactivate
the mode if there is no connection in 90 seconds.

The VoxTube 500 is loaded with voice announcements that talks you through setup and daily operation, In the table below you can see the most common announcem

Power On

Prompt tone

Prompt tone

Battery low

Pairing

Auto power off After 5 min connectionless mode, VoxTube 500 will auto power off.

8 VICE GUIDANCE

Turn On

Pairing

Redial Turn Off Connected

Disconnected

Battery low

Talking

Turn on

Turn off

Pairing mode

Finished charging

10 CHARGING

0 0

0 Ъ

12 MAINTENANCES

VoxTube 500

Music play

Charging

TALK button once to play or pause music, "beep'

9 LED INDICATOR LED blinks twice every 7 seconds Connected Disconnected LED blinks twice every 2 seconds Coming call LED blinks once every 1 seconds

LED blinks once every 7 seconds

LED blinks once every 7 seconds

LED blinks thrice

LED blinks quickly

LED is on LED is off

Use the included USB cable to connect VoxTube500 to any powered USB equipment.

**—** 

When VoxTube 500 has low battery level, there will b "Battery low" voice prompt.
White LED is on during charging.
LED is off when charging is completed.
To fully charge VoxTube 500 takes 1.5-2 hours.
If you charge VoxTube 500 takes turning it off, it is still connected to your mobile devices.

**←**□□=

LED lights for 2 seconds

## VOX I LIDE 5UU Always store the VoxTube 500 with the power off and safely protected. Avoid storage at extreme temperatures (above 45°C or below -10°C). This can shorten battery life and may affect operation. Do not expose the VoxTube 500 to rain or other liquids. Notes on Environmental Protection After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies: Electrical and electronic devices must not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collection points that are set up for this purpose or designated points of sale. However, such details are defined by the national law of the respective country. This symbol on the product, the instruction manual or the packaging indicates that the product is subject to these regulations. By recycling, reusing the materials, or other forms of utilizing old devices, you are making an important contribution in protecting our environment. 11 TROUBLESHOOTING & FAQ I hear crackling noises For the best audio quality, always wear your headset on the same side of your body as your mobile phone.

| cannot hear anything in my headset - Ensure that the headset is paired with the phone. - Make sure that the phone is connected to the headset-if it does not connect either from the phone's Bluetooth menu or by pressing the TALK button, following the pairing instructions in School, and the phone is the phone is bluetooth menu or by pressing the TALK button, following the

I have pairing problems
you may deleted your headset pairing connection in
your mobile phone.
Follow the pairing instructions in section 4.

Will the VoxTube 500 work with other Bluetooth devices ?
The VoxTube500 is designed to work with Bluetooth mobile phones. It can also work with other devices that are compliant with Bluetooth version 3.0 and support a headset, hands-free profile, A2DP music play.

I cannot use reject call, redial or voice dialing, battery App meter
These functions are dependent on your phone supporting them. Please check your mobile phon manual for further details.

pairing instructions in Section 4.

## Thank you for your purchase of MIPOW's product. MIPOW warrants that the product is at the time of its original purchase free of defects in workmanship and material. This Limited Warranty for the product shall last for twelve(12) months from the date of original purchase. This original warranty card and original invoice must be presented at the time you require warranty service or such warranty will be voided. This limited warranty is valid only if the product is used for the purpose for which it was designed. It does not apply to damage or loss caused by negligence; physical abuse; misuse; accident; exposure to moisture; dampness or extrem thermal; unauthorized modifications; unauthorized opening or destroyed to the continuous of the continuous continuous.

forces of nature; or other actions beyond the able control of MIPOW.

In case of when the warranty does not apply, a repair or replacement charge will be incurred. The customer shall be responsible for sending the defective product to and collecting the repaired or replaced product from the service center.

NB: MIPOW reserves the right to interpret the terms and conditions contained herein; and the right for any changes without prior notice.

repair; fo reasonal

Warranty Card

FCC STATEMENT Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver. receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio / TV technician for help. tecrinician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Caution
The manufacture is not responsible for any radio or TV
interference caused by unauthorized modifications to this
equipment. Such modifications could void the user
authority to operate the equipment.

CUSTOMER SERVICE For FAQs and more information on this product, please go to www.mipow.com.

© 2016 MIPOW. All rights reserved. PLAYBULB is a trademark of MIPOW.