



USER MANUAL

VoxTube 700 Bluetooth Headset

Product Code: BTV500

 


www.mipow.com



Thank you


Thank you for purchasing MIPOW VoxTube 700, we hope you enjoy it.

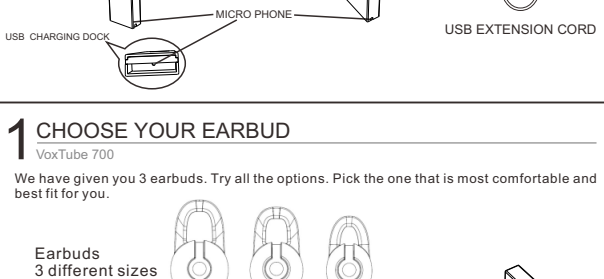

1 CHOOSE YOUR EARBUD

VoxTube 700

 We have given you 3 earbuds. Try all the options. Pick the one that is most comfortable and best fit for you.

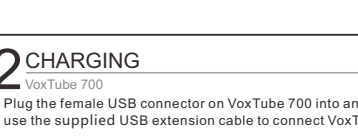


Put on your Earbud

To fit a new earbud, position the earbud over the speaker housing and gently press down on the earbud.

2 CHARGING

VoxTube 700

 Plug the female USB connector on VoxTube 700 into any powered USB equipment or to use the supplied USB extension cable to connect VoxTube 700 to the USB wall charger.



Charging VoxTube 700

- When VoxTube 700 has low battery level, "Battery Low" will be announced.
- White LED is on during charging.
- LED is off when charging is completed.
- To fully charge VoxTube 700, it takes 2 hours.
- If you charge VoxTube 700 without turning it off, it is still connected to your mobile devices.

3 PAIRING

VoxTube 700

Pair VoxTube 700 with your **FIRST** phone

Activate pairing mode on your VoxTube 700.

Turn on Bluetooth

On an iPhone
Go to SETTINGS > GENERAL > and enable Bluetooth.

On an Blackberry
Go to SETTINGS/ OPTIONS > BLUETOOTH and enable Bluetooth.

On an Android Phone
Go to SETTINGS > WIRELESS & NETWORK > Bluetooth Settings and enable Bluetooth.

Other Cell Phones
Review the instruction manual of your phone.

 
- Press & Hold the TALK Button for 7 Seconds to activate pairing mode on your VoxTube 700.
- Go to your phone's Bluetooth settings, ADD or SEARCH FOR DEVICES when "MIPOW_Vox700" appears, select it or enter passcode "0000" if asked.
- There is prompt tone when paired.

During pairing process, the white indicator flashes quickly.



Battery meter on iPhone shows up automatically once connected.

To pair your VoxTube 700 to another phone, repeat these steps.




Pair VoxTube 700 with your SECOND Phone

Pairing two phones for the first time

- When VoxTube 700 needs to pair with a second device, it needs to be restarted and reactivate the pairing mode.
- Go to your phone's Bluetooth settings, ADD or SEARCH FOR DEVICES when "MIPOW_Vox700" appears, select it or enter passcode "0000" if asked.
- There is prompt tone when paired.

 NOTE : If your VoxTube 700 is connected before, then you can reconnect it directly with your phone.

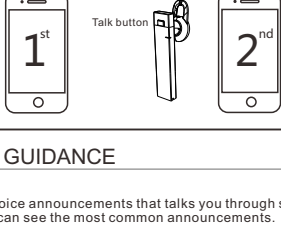

4 VoxTube 700 VOICE GUIDANCE

VoxTube 700

The VoxTube 700 is loaded with voice announcements that talks you through setup and daily operation. In the table below you can see the most common announcements.


Turn On	Power on
Pairing	Pairing
Redial	Prompt tone
Turn Off	Power Off
Connected	Prompt tone
Disconnected	Prompt tone
Low Power	Battery Low

Pair VoxTube 700 by Voice Guide

Wear your VoxTube 700 and press the TALK button as the picture shown on the right. Press & Hold the TALK button for 7 seconds (about 3 seconds interval, it will announce "Power On" and carry on another 4 seconds interval, it will announce "Pairing"), and then release TALK button and Go.

Mobile phone's Bluetooth settings:
• ADD or SEARCH FOR DEVICES when "MIPOW_Vox700" appears, select it or enter passcode "0000" if asked.

 - There is prompt tone when paired..

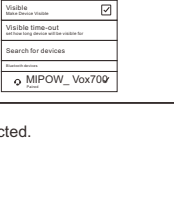

Bluetooth	Bluetooth	Bluetooth	Bluetooth
Device name	Device name	Device name	Device name
Visible	Visible	Visible	Visible
Visible time-out	Visible time-out	Visible time-out	Visible time-out
Search for devices	Search for devices	Search for devices	Search for devices
		MIPOW_Vox700	MIPOW_Vox700

Battery meter on iPhone shows up automatically once connected.

Adjust the VoxTube 700 Speaker Volume


Press (+) to increase the VoxTube 700 speaker volume
Press (-) to decrease the VoxTube 700 speaker volume



5 TALKING

VoxTube 700

 - Press the TALK button on your VoxTube 700 to start all functions.
- POWER ON Press TALK button for 3 seconds, "Power On" voice prompt.
- POWER OFF Press & Hold TALK button for 4 seconds, "Power Off" prompt.
- ANSWER A CALL Tap TALK button once, continuous prompt tone.
- NOTE: This will also answer an incoming call while on a call. When you VoxTube 700 is connected to TWO phones, this will answer the phone on the call from either phone.
- REJECT A CALL Tap TALK button twice while the phone is ringing, "Beep Beep" prompt tone.
- ANSWER CALLS FROM TWO PHONES
Tap the TALK button once to answer a call from either one of the connected phones.
- During a call tap TALK button once to end it and answer the other incoming call, "Beep" prompt tone. Hold a call and answer the other incoming call, tap the TALK button twice, "Beep" prompt tone.
- TRANSFER A CALL When you talk on the Vox Tube 700, press & hold TALK button for 2 seconds to transfer the call between Vox Tube 700 and the phone, "Beep" prompt tone.
- REDIAL LAST NUMBER CALLED Double tap TALK button when you hear music or in standby mode.
- INITIATE VOICE DIALING While in standby mode, press TALK button for 2 seconds, and then speak a command, "Beep" prompt tone.
- NOTE: When connected to multiple phones, Redial and Voice Dial will work on the phone with last active call.

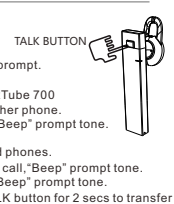

- TRANSFER A CALL When you talk on the Vox Tube 700, press & hold TALK button for 2 seconds to transfer the call between Vox Tube 700 and the phone, "Beep" prompt tone.
- REDIAL LAST NUMBER CALLED Double tap TALK button when you hear music or in standby mode.
- INITIATE VOICE DIALING While in standby mode, press TALK button for 2 seconds, and then speak a command, "Beep" prompt tone.
- NOTE: When connected to multiple phones, Redial and Voice Dial will work on the phone with last active call.

6 OTHER FUNCTIONS

VoxTube 700

Listening to Music

VoxTube 700 is capable of streaming over Bluetooth - either from a mobile phone or any other Bluetooth device supporting A2DP. Once you have paired your VoxTube 700 with your mobile phone or with a Bluetooth music player, use your phone or music player to play and pause. When you receive call, the music will automatically be suspended and you will be able to answer or reject a call through the VoxTube 700. Once you end a call, the music will resume.

Play / Pause
Tap the TALK button once to play or pause music, "beep" prompt tone.

Charge to reset
If you charge VoxTube 700 without turning it off, it is still connected to your mobile devices.

Exit pairing mode
Under the pairing mode VoxTube 700 will deactivate the mode if there is no connection in 90 seconds.

Auto power off
After 5 min connectionless mode, VoxTube 700 will Auto power off.

After 5 min connectionless mode, VoxTube 700 will Auto power off.

7 SPECIFICATION


VoxTube 700

Model	BTV700
Talk Time	Up to 4 hours
Standby Time	Up to 5 days
Charge Time	2 hours (full)
Wireless range	33ft (10m)
Bluetooth	Bluetooth Version: 3.0
Connection	Supports 2 active mobile devices at the same time
Speaker	Wideband capable
Voice quality	HD Audio (16KHz)
Weight	5g
Dimension	49(L) x 11.8(W) x 4.5(T)mm

8 LED INDICATOR

VoxTube 700

Connected	LED blinks twice every 7 seconds
Disconnected	LED blinks twice every 2 seconds
Coming call	LED blinks once every 1 seconds
Talking	LED blinks once every 7 seconds
Turn on	LED blinks thrice
Turn off	LED lights for 2 seconds
Pairing mode	LED blinks quickly
Music play	LED blinks once every 7 seconds
Charging	LED is on
Finished charging	LED is off

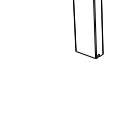 

9 TROUBLESHOOTING & FAQ

VoxTube 700

I hear crackling noises

For the best audio quality, always wear your headset on the same side if your body as your mobile phone.

I cannot hear anything in my headset

- Ensure that the headset is paired with the phone.
- Make sure that the phone is connected to the headset-if it does not connect either from the phone's bluetooth menu or by pressing the TALK button, following the pairing instructions in Section 3 or 4.

I have pairing problems

You may deleted your headset pairing connection in your mobile phone.

Follow the pairing instructions in section 3 or 4.

Will the Vox Tube 700 work with other Bluetooth devices ?

The Vox Tube700 is designed to work with Bluetooth mobile phones. It can also work with other devices that are compliant with Bluetooth version 3.0 and support a headset, hands-free profile, A2DP music play.

I cannot use reject call, redial or voice dialing, battery App meter

These functions are dependent on your phone supporting them. Please check your mobile phone's manual for further details.

10 TAKING CARE OF YOUR VoxTube 700

VoxTube 700

- Always store the **VoxTube 700** with the power off and safely protected.
- Avoid storage at extreme temperatures (above 45°C or below -10°C).This can shorten battery life and may affect operation.
- Do not expose the **VoxTube 700** to rain or other liquids.

Notes on Environmental Protection

After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies: Electrical and electronic devices must not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collection points that are set up for this purpose or designated points of sale.

However, such details are defined by the national law of the respective country. This symbol on the product, the instruction manual or the packaging indicates that the product is subject to these regulations.

By recycling, reusing the materials, or other forms of utilizing old devices, you are making an important contribution in protecting our environment.

WARRANTY CARD

Limited Warranty

Thank you for your purchase of MIPOW's product. MIPOW warrants that the product is at the time of its original purchase free of defects in workmanship and material. This Limited Warranty for the product shall last for twelve(12)months from the date of original purchase. This original warranty card and original invoice must be presented at the time you require warranty service or such warranty will be voided.

This limited warranty is valid only if the product is used for the purpose for which it was designed. It does not apply to damage or loss caused by negligence; physical abuse; misuse; accident; exposure to moisture; dampness or extreme thermal; unauthorized modifications; unauthorized opening or repair; forces of nature; or other actions beyond the reasonable control of MIPOW. In case of when the warranty does not apply, a repair or replacement charge will be incurred. The customer shall be responsible for sending the defective product to and collecting the repaired or replaced product from the service center.

NB: MIPOW reserves the right to interpret the terms and conditions contained herein; and the right for any changes without prior notice.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

CUSTOMER SERVICE

For FAQs and more information on this product, please go to www.mipow.com.

© 2016 MIPOW. All rights reserved.
PLAYBULB is a trademark of MIPOW.