



USER MANUAL

 
BOOMAX

Product Code: BTS1000

With Incredibly Big Sound!



www.mipow.com

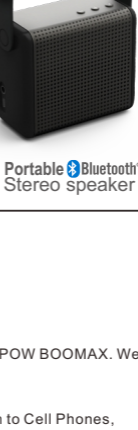

Portable Bluetooth® Stereo speaker

WELCOME

Thank you for purchasing the MIPOW BOOMAX. We hope you enjoy it!

BOOMAX CAN:

- Connect wirelessly via Bluetooth to Cell Phones, Tablets and Laptops.
- Play music with a big clear sound and volume control.
- Chat with your friends on your phone, tablet or PC.
- Use the BOOMAX as a speakerphone to make calls, answer calls and more...

 
1 ABOUT BOOMAX

BOOMAX is a Bluetooth V4.0 compliant, low energy Bluetooth medium size speaker with incredibly big and clear CD music quality sound (i.e. apt-X) and bass. It is compatible with most smart phones, tablets, notebooks, PCs, and most devices with built-in Bluetooth.


BOOMAX comes with its stereo output power of 3 Watts x 2, its classic shape matches well with the carefully chosen anodized aluminum-alloy colors, it also comes with a detachable handle suitable for outdoor use. With built-in microphone, it can be used as a portable Bluetooth speakerphone.

The built-in battery can support up to 12 hours talk time and 12 hours playing music time (i.e. depending on volume and music type). Its compact in size and only measures 110(W) x 56(L) x 52(H)mm. With its voice guidance, BOOMAX tells you what you need to know about the pairing.


2 ACCESSORIES BOOMAX




BOOMAX

 

Handle

 

Micro USB charging cable

 

Stereo Cable

3 SPECIFICATIONS BOOMAX

- Model:** BTS1000
- Talk Time:** Up to 12 hours
- Music Playing Time:** Up to 12 hours depending on volume and music type
- Standby Time:** Up to 125 days
- Charging Time:** 3 - 4 hours (for full)
- Weight:** 370 grams
- Dimensions:** 110(W) x 56(L) x 52(H)mm
- Colors:** light blue /chocolate /red /black/silver
- Bluetooth Version:** 4.0
- Multipoint:** Connected two mobile phones or Bluetooth devices simultaneously
- Wireless Range:** 10m (33 feet)
- Supported Profiles:** A2DP / AVRCP / HFP (HD Voice)
- Supported Decoders:** aptX / AAC / MP3
- Supported 3.5mm jack:** with supplied 3.5mm stereo jack cable
- Charging Plug:** 5 PIN micro-USB, B Type

4 OPERATION BOOMAX

Function	Operation	Voice prompt/Tone
Pairing	Press & hold for 7s	"Boot music"...pairing
Turn On	Press & hold for 3s	"Boot music"
Turn Off	Press & hold for 4s	"Turn off music"
Answer call	Tap the button	"Continuous... beep"
Hang up	Tap the button	"Beep"
Reject call	Double-Tap button	"Beep Beep"
Redial	Double-Tap button	"Beep"
Cancel dial	Tap the button	"Beep"

4 OPERATION...Continued BOOMAX

Function	Operation	Tone
Voice dial	Press & hold & both buttons for 1s	"Beep"
Stop voice dial	Press & hold & both buttons for 1s	---
Play / pause	Press & hold button for 1s	"Beep"
Last song	Press & hold button for 2s	---
Next song	Press & hold button for 2s	---
Switch phone & BOOMAX	Press & hold button for 2s	"Beep"

4 OPERATION...Continued BOOMAX

Function	Operation	Tone
Volume Up	Tap the button	"Beep"
Volume Down	Tap the button	"Beep"
Answer call while playing music	Tap the button	---
EQ Select	Simultaneously press & both buttons while playing music	"Beep"


4 OPERATION...Continued BOOMAX

Function	Operation	Tone
When 1st phone on call, 2nd phone is calling (Answer the 2nd phone call & End the 1st phone call)	Tap the button	"Beep"
When 1st phone on call, 2nd phone is calling (Answer the 2nd phone call & Hold the 1st phone call)	Double-tap button	"Beep"
When 1st phone on music, 2nd phone is calling (Answer the 2nd phone call & 1st music pause, call end & music resumes)	Tap the button	"Beep..."

VOICE PROMPT

Function	Voice Prompt
Pair	"Pairing"
Turn On	"Boot music"
Turn Off	"Turn Off music"
Low battery	"Battery low"

 5 TURN ON / TURN OFF BOOMAX

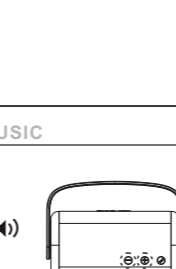

- Press & Hold button for 3 seconds to **Turn on** BOOMAX, a white LED blinks twice and "boot music" will be heard.
- Press & Hold button for 4 seconds to **Turn off** BOOMAX, a white LED lights up for 2 seconds and "Turn off music" will be heard.

 
6 PAIRING with your 1st Phone BOOMAX

Pair BOOMAX with your 1st phone

- Step 1. Activate Bluetooth on your phone**
- Step 2. Turn on Bluetooth**
- On an iPhone, iPod or iPad**
Go to SETTINGS > GENERAL > and enable Bluetooth.
- On a Blackberry**
Go to SETTINGS/OPTIONS > BLUETOOTH and enable Bluetooth.
- On an Android Phone**
Go to SETTINGS > WIRELESS & NETWORK > Bluetooth Settings and enable Bluetooth.
- Other Cell Phones**
Please review the user manual that came with your device.


6 PAIRING with 1st Phone...Continued BOOMAX

- Turn on your Bluetooth on your BOOMAX
- Press & Hold button for 7 seconds on your BOOMAX to activate and hold mode of the BOOMAX.
- * you will hear the "boot music" at the 3rd second and the voice prompt "pairing" at the 7th second and white LED will blink during pairing.

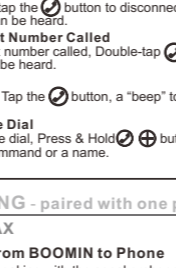

6 PAIRING with 1st Phone...Continued BOOMAX

 
- Open your phone's Bluetooth settings, add or search for devices when "MIPOW_BOOMAX" appears, select it or enter pass code "0000" if asked.

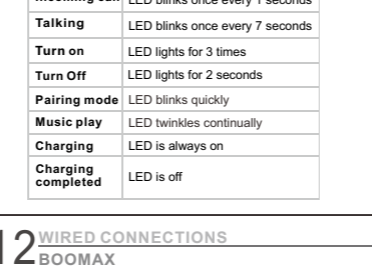

- You will hear "beep" sound from BOOMAX once paired with your phone, the LED flashes twice every 7 seconds while paired.


6 PAIRING with 1st Phone...Continued BOOMAX

 - Battery meter on iPhone shows up automatically when connected. Pairing is successfully completed.

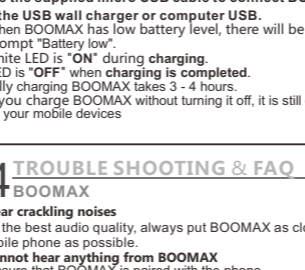

7 PAIRING with your 2nd Phone BOOMAX

 - Pairing with two phones for the first time**
- When BOOMAX needs to pair with a second device, it needs to be restarted and reactivate the pairing mode.
- Go to your phone's Bluetooth settings, add or search for devices when "MIPOW_BOOMAX" appears, select it or enter passcode "0000" if asked.
- * "beep" tone will be heard when paired.

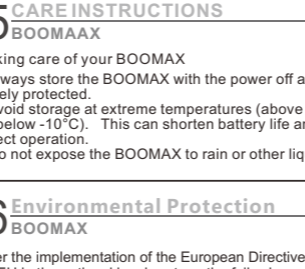


7 PAIRING with 2nd Phone...Continued BOOMIN

- NOTE:** If your BOOMAX is connected before, then it will automatically reconnect the last connected mobile device. Otherwise, you need to repeat the steps in 6. (i.e. Pages 9 - 12) for the pairing details.

- Deactivate BOOMAX pairing mode**
- Under pairing mode, BOOMAX will deactivate if there is no connection within 90 seconds.
- For 5 minutes without connection, BOOMAX will power off automatically.

 8 PLAY MUSIC BOOMIN

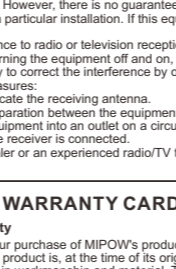

- In pairing mode, "Beep" tone button for 1 second to play or stop music, "Beep" tone will be heard
- During music play, Press & Hold button for 2 seconds to play the previous song and Press & Hold button to play the next song.
- During a call or music play, press button to volume up and button to volume down.

8 PLAY MUSIC...Continued BOOMAX

- The music will pause if there is an incoming call; Tap the button to answer the call. The music will play automatically once you end the call.

EQ Select (Equalizer-Audio effect)
2 types of EQ - "Mega Bass" and "Rock" can be selected. While playing music, simultaneously Press & Hold & both buttons, "beep" tone can be heard and "Mega Bass" is selected.

Simultaneously Press & Hold & both buttons again, "beep" tone can be heard and "Rock" is selected.

9 TALKING - paired with one phone BOOMIN

- Speakerphone**
- You can use the BOOMAX as a speakerphone by connected wirelessly with Bluetooth to your phone, tablet or PC so that you can make calls or answer calls by speaking to the built-in microphone as shown below.

9 TALKING - paired with one phone... BOOMAX

- Answer a Call**
Tap the button to answer an incoming call, a "beep" tone can be heard.
- Reject a Call**
Double-tap button to reject an incoming call, a "beep...beep" tone can be heard.
- End a Call**
While on a call, tap the button to disconnect and end the call, a "beep" tone can be heard.
- Redial the Last Number Called**
To redial the last number called, Double-tap button, a "beep" tone can be heard.
- Cancel a Call**
To cancel a call, Tap the button, a "beep" tone can be heard.
- Initiate a Voice Dial**
To initiate a voice dial, Press & Hold & button for 2 seconds, then speak a command or a name.

9 TALKING - paired with one phone... BOOMAX

- Switch call from BOOMIN to Phone**
- While you are speaking with the speakerphone of BOOMAX and you want to switch the call to the phone, just Press & Hold button for 2 seconds to transfer the call from BOOMAX to Phone.

10 TALKING - paired with two phones BOOMAX

- Choose Multipoint function**
- Double-tap button to initiate the multipoint function.
- Double-tap button to cancel the multipoint function.
- Tap the button to end the 1st phone's call and answer the 2nd phone's call.
- If you want to hold the 1st phone's call, Double-tap button to hold the call. Tap the button to answer the 2nd phone's call. 1st and 2nd music play will pause, when you end your 2nd phone's call, 1st phone music play resumes.

11 LED INDICATOR BOOMAX

Connected	LED blinks twice every 7 seconds
Disconnected	LED blinks twice every 2 seconds
Incoming call	LED blinks once every 7 seconds
Talking	LED blinks once every 7 seconds
Turn on	LED lights for 3 times
Turn Off	LED lights for 2 seconds
Pairing mode	LED blinks quickly
Music play	LED twinkles continually
Charging	LED is always on
Charging completed	LED is off

12 WIRED CONNECTIONS BOOMAX

- 3.5mm Jack Connector**
Connect BOOMAX to any audio device with a 3.5mm Jack Connector, using the supplied audio stereo cable.
- Note:** When a device is connected to the 3.5mm Jack Connector, Bluetooth is disabled and wireless devices will not be able to play music.

13 CHARGING BOOMAX

- Use the supplied micro USB cable to connect BOOMAX to the USB wall charger or computer USB.
- When BOOMAX has low battery level, there will be voice prompt "Battery low".
- white LED is "ON" during charging.
- LED is "OFF" when charging is completed.
- fully charging BOOMAX takes 3 - 4 hours.
- if you charge BOOMAX without turning it off, it is still connected to your mobile devices

14 TROUBLE SHOOTING & FAQ BOOMAX

- I hear crackling noises**
For the best audio quality, always put BOOMAX as close your mobile phone as possible.
- I cannot hear anything from BOOMAX**
Ensure that BOOMAX is paired with the phone.
- Make sure that the phone is connected to BOOMAX, if it does not connect either from the phone's Bluetooth menu or by pressing the button, follow the pairing instructions in Section 6.
- I have pairing problems**
you may delete BOOMAX pairing connection in your mobile phone.
- Follow the pairing instructions in Section 6.
- Will BOOMAX work with other Bluetooth devices?**
BOOMAX is designed to work with Bluetooth mobile phones. It can also work with other devices that are compliant with Bluetooth version 4.0 and support a hands-free profile, A2DP music play.

14 TROUBLE SHOOTING & FAQ BOOMAX

- I cannot use reject call, redial or voice dialing, battery App meter**
- These functions are dependent on your phone supporting them. Please check your mobile phone's manual for further details.

15 CARE INSTRUCTIONS BOOMAX

- Taking care of your BOOMAX
- Always store the BOOMAX with the power off and safety protected.
- Avoid storage at extreme temperatures (above 45°C or below -10°C). This can shorten battery life and may affect operation.
- Do not expose the BOOMAX to rain or other liquids.

16 Environmental Protection BOOMAX

After the implementation of the European Directive 2002/96/EU in the national legal system, the following applies: Electrical and electronic devices must not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service life to the public collection points that are set up for this purpose or designated points of sale. However, such details are defined by the national law of the respective country. This symbol on the product, the instruction manual or the packaging indicates that the product is subject to these regulations. By recycling, reusing the materials, or other forms of utilizing old devices, you are making an important contribution in protecting our environment.

17 FCC STATEMENT BOOMAX

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

17 FCC STATEMENT...Continued BOOMAX

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARRANTY CARD

Limited Warranty
Thank you for your purchase of MIPOW's product. MIPOW warrants that the product is, at the time of its original purchase is free of defects in workmanship and material. This Limited Warranty for the product shall last for twelve (12) months from the date of original purchase. This original warranty card and original invoice must be presented at the time you require warranty service or such warranty will be voided.

This limited warranty is valid only if the product is used for the purpose for which it was designed. It does not apply to damage or loss caused by negligence; physical abuse; misuse; accident; exposure to moisture; dampness or extreme thermal; unauthorized modifications; unauthorized opening or repair; acts of nature; or other actions beyond the reasonable control of MIPOW. In case of when the warranty does not apply, a repair or replacement charge will be incurred. The customer shall be responsible for sending the defective product to and collecting the repaired or replaced product from the service center.

NB: MIPOW reserves the right to interpret the terms and conditions contained herein; and the right for any changes without prior notice.

CUSTOMER SERVICE

For FAQs and more information on this product, please go to www.mipow.com.

© 2015 MIPOW. All rights reserved.
PLAYBULB is a trademark of MIPOW